

# Series 3 Technician's Installation and Service Training Manual

## Part Open Programming



### Warning Electrical Shock Hazard

To prevent serious injury or death always ensure power is disconnected when wiring anything into the ZAP Controller.

To program this function it is necessary to open the case lid of the controller to access the program button and to view the acknowledge light if the beeper module is not installed. (Figure A)

Start with the door fully closed.

Press and hold the program button. (Figure B)

Release the button after the 5th flash of the ACK LED or beep if the 850 beeper module is installed. (Figure C)

Now, press the open button; the door will now start opening.

At the required open position, press Stop.

You will then receive two ACK LED flashes or beeps from the 850 Beeper (if installed) will confirm successful programming. (Figure C)

The door will now open to this programmed position and stop.

After the door stops at the programmed height, if it is required to have the door to continue to the fully open position, press the Open button again and the door will open fully.

To erase the part open position:

Press and hold the program button. (Figure B)

Release the button after the 6th flash of the ACK LED or beep if the 850 beeper module is installed. (Figure C)

You will then receive two ACK LED flashes or beeps from the 850 Beeper (if installed) will confirm successful programming.



Figure A

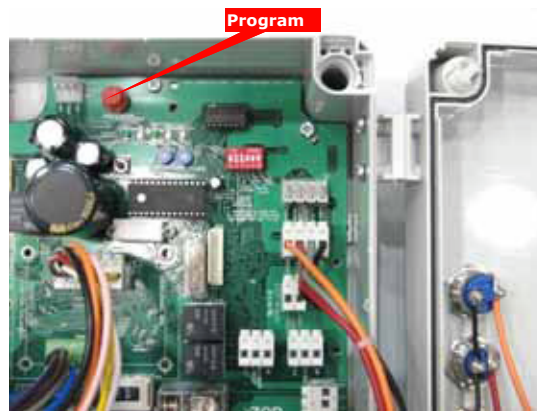


Figure B

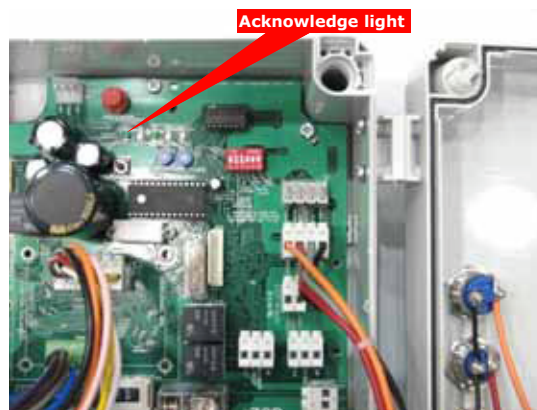


Figure C

### ZAP Series 3 Simply Logical

ZAP Controls  
100 Waterloo Blvd. Anglesey Business Park, Littleworth Road, Cannock, Staffordshire, England  
UK Contact 011-44-154-387-9444 sales@zap-uk.com  
USA Contact 931-510-4432 sales@zap-america.com  
USA Tech Support 931-510-4432 via telephone or text  
Online www.zap-uk.com