

# Series 3 Technician's Installation and Service Training Manual

## 401002 Photo Cell Mounting Instruction

Materials Needed  
401002 Photo Cell

Tools required  
Appropriate wrenches and screwdrivers,  
Appropriate mounting fasteners

Insert photo beams into the mounting brackets s  
shown in (Figure A).

Mount each bracket on opposing sides of the door  
5-6" above the floor to the door jamb surface using  
provided screws.

Brackets are adjustable (Figure B)

Run provided wire along edges of Jamb, securing  
along the way, to the ZAP controller.



Figure A

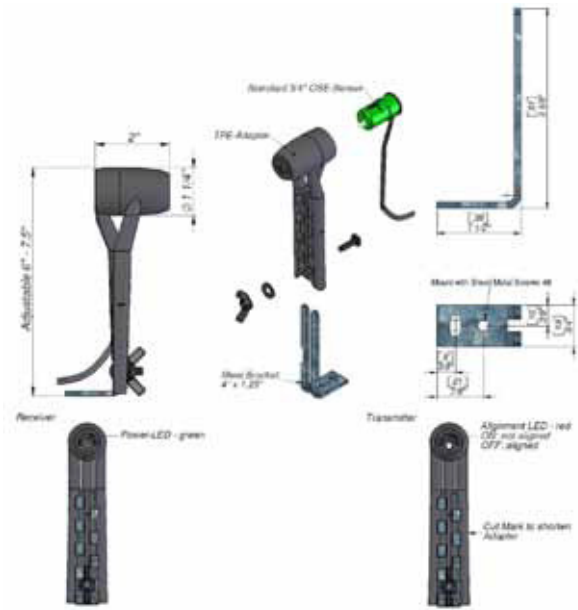


Figure B

### ZAP Series 3 Simply Logical

ZAP Controls  
100 Waterloo Blvd. Anglesey Business Park, Littleworth Road, Cannock, Staffordshire, England  
UK Contact 011-44-154-387-9444 sales@zap-uk.com  
USA Contact 931-510-4432 sales@zap-america.com  
USA Tech Support 931-510-4432 via telephone or text  
Online www.zap-uk.com